



RZR PRO R / TURBO R FRONT GRILLE

IMPORTANT: Thank you for purchasing this Cagewrx product. Please read through this entire document before proceeding with installation. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping. If anything is missing or damaged, or if you need technical assistance with any aspect of this installation, call Cagewrx at (951) 223-9118 as soon as possible. This document last updated June. 2023.

APPLICATIONS

These Installation Instructions apply to the following Cagewrx products:



PROFGPC

RZR Pro R / Turbo R Front Grille

PARTS LIST

Please check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping. If anything is missing or damaged, call Cagewrx at (951) 223-9118 .

1. Front Grille Assembly
2. Center Installation Bracket
3. (2) Side Installation Brackets
4. (6) M6 Clip Nuts
5. (2) M6 x 25mm Button Head Cap Screws
6. (4) M6 x 40mm Button Head Cap Screws
7. (2) Zip Ties

TOOLS NEEDED

- 5/32" Hex Key



INSTALLATION PROCEDURE


1. Begin by removing the factory Grille by pressing down on the 2 tabs at the top of the grille and pulling the grille away from the RZR.



2. Install the supplied M6 Clip Nuts on to the center mounting bracket and (2) side mounting brackets as shown below. Make sure the extruded side of the clip nut is facing the correct way on the center mounting bracket.



3. Place the Side Brackets in the corners of the outer grille pieces on top of the factory mesh. Make sure the extruded side of the clip nut is facing the back of the RZR. Zip tie the brackets in place as shown and leave snug enough for a little movement.

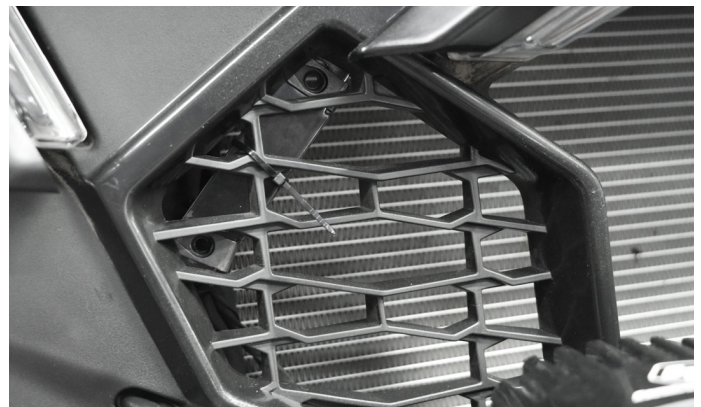

4. Install the Center Bracket into the slots where the factory grille mounts at the bottom as shown below.



5. Insert the Grille Assembly at an angle and slide the top up in to place first in order to get it to set in place properly. Once the top of the grille is in place under the plastic, the bottom to push right into place.



6. Secure the center bracket at the bottom of the grille assembly with the (2) supplied M6 x 25mm bolts using a 5/32" Hex Key.



7. Secure both side brackets with the (4) supplied M6 x 40mm bolts using a 5/32" Hex Key. You can use the hex key as a tool to align the bracket with the bolts as you get them started.

